

# Common Vehicle Interfaces - Capabilities

- [Vehicle Capabilities](#)
  - [Cabin HVAC:](#)
    - [Get On/Off State of HVAC system](#)
    - [Control On/Off State of HVAC system](#)
    - [Get On/Off State of Air Conditioning System](#)
    - [Control On/Off State of Air Conditioning System](#)
    - [Get On/Off State of Air Recirculation](#)
    - [Control On/Off State of Air Recirculation](#)
    - [Get On/Off State of Front Defroster](#)
    - [Control On/Off State of Front Defroster](#)
    - [Get On/Off State of Rear Defroster](#)
    - [Control On/Off State of Rear Defroster](#)
    - [Get Estimated Cabin Air Temperature](#)
    - [Get Temperature per zone \(HVAC Station\)](#)
    - [Control Temperature per zone \(HVAC Station\)](#)
    - [Get Fan Speed per zone \(HVAC Station\)](#)
    - [Control Fan Speed per zone \(HVAC Station\)](#)
    - [Get Air Distribution per zone \(HVAC Station\)](#)
    - [Control Air Distribution per zone \(HVAC Station\)](#)
  - [Cabin Seating](#)
    - [Get Seat Position per seat](#)
    - [Control Seat Position per seat](#)
    - [Get Seat Heating Mode \(Heat, Vent, Cool\) and Level per seat](#)
    - [Control Seat Heating Mode \(Heat, Vent, Cool\) and Level per seat](#)
    - [Get Seat Occupancy Status](#)
    - [Get Seat Belt Status](#)
  - [ADAS Perception:](#)
    - [Publish List of Potentially Moving Objects](#)
    - [Publish Road Objects](#)
    - [Publish Static Objects](#)

Child Pages:

- [Climate Capability Details - VSS Alignment](#)
- [Seat Capability Details - VSS Alignment](#)

## Vehicle Capabilities

Cabin HVAC:

**[Get On/Off State of HVAC system](#)**

**[Control On/Off State of HVAC system](#)**

**[Get On/Off State of Air Conditioning System](#)**

**[Control On/Off State of Air Conditioning System](#)**

**[Get On/Off State of Air Recirculation](#)**

**[Control On/Off State of Air Recirculation](#)**

**[Get On/Off State of Front Defroster](#)**

**[Control On/Off State of Front Defroster](#)**

**[Get On/Off State of Rear Defroster](#)**

**[Control On/Off State of Rear Defroster](#)**

**[Get Estimated Cabin Air Temperature](#)**

**Get Temperature per zone (HVAC Station)**

**Control Temperature per zone (HVAC Station)**

**Get Fan Speed per zone (HVAC Station)**

**Control Fan Speed per zone (HVAC Station)**

**Get Air Distribution per zone (HVAC Station)**

**Control Air Distribution per zone (HVAC Station)**

## Cabin Seating

**Get Seat Position per seat**

**Control Seat Position per seat**

**Get Seat Heating Mode (Heat, Vent, Cool) and Level per seat**

**Control Seat Heating Mode (Heat, Vent, Cool) and Level per seat**

**Get Seat Occupancy Status**

**Get Seat Belt Status**

## ADAS Perception:

Based on "ISO 23150 - Road vehicles - Data communication between sensors and data fusion unit for automated driving functions - Logical interface"

### **Publish List of Potentially Moving Objects**

Represents possible moving object information provided by a camera, lidar, radar or Ultrasonic sensor.

### **Publish Road Objects**

### **Publish Static Objects**